

INSTALLATION INSTRUCTIONS

for PULL-DOWN INFRA-RED MODELS IFW-63 SERIES

ELECTRICAL SPECIFICATIONS:

- 120 Volts; 250 Watts; 2 Amps.
- 240 Volts; 275 Watts; 1 Amp.

UL AND CSA REQUIRE:

- Wires of warmer are to be connected to 75°C wire.
- Wires to be installed with conduit
- Warmers are not to be installed closer than 1" from a wall.
- Warmers cannot be closer than 16" above a combustible surface


HOW TO INSTALL: (See Figure)

NOTE: Outlet box (7) and screws (5) are to be furnished by customer.

1. Pull canopy (2) down over coil cord.
2. Attach ground wire from the ceiling to the "GND" hold in the plate (4) with screws (6).
3. Wire the warmer leads to the outlet box (7) with screws (5).
4. Attach plate (4) to the outlet box (7) with screws (5).
5. Lower or raise the coil cord to the height you want.
6. Adjust the tension of the coil cord in the slot as shown.
 - a. To increase tension, turn slot clockwise.
 - b. To decrease tension, turn slot counter clockwise.
7. Pull up canopy (2) and screw it to the plate (4) with two machine screws (3).
8. Screw lamp into socket.

REPLACEMENT PARTS:

Lamp, Red (120V)	0820-001
Lamp, Red (120V), Shatterproof	0820-001-SP
Lamp, White (120V)	0820-033
Lamp, Red (240V), Shatterproof	0820-014-SP
Socket	0822-037
Switch	0808-002
Reel/Pulley Assembly	1287-084
Coil Cord (IFW63)	0834-006
Coil Cord (IFW63L)	0834-007

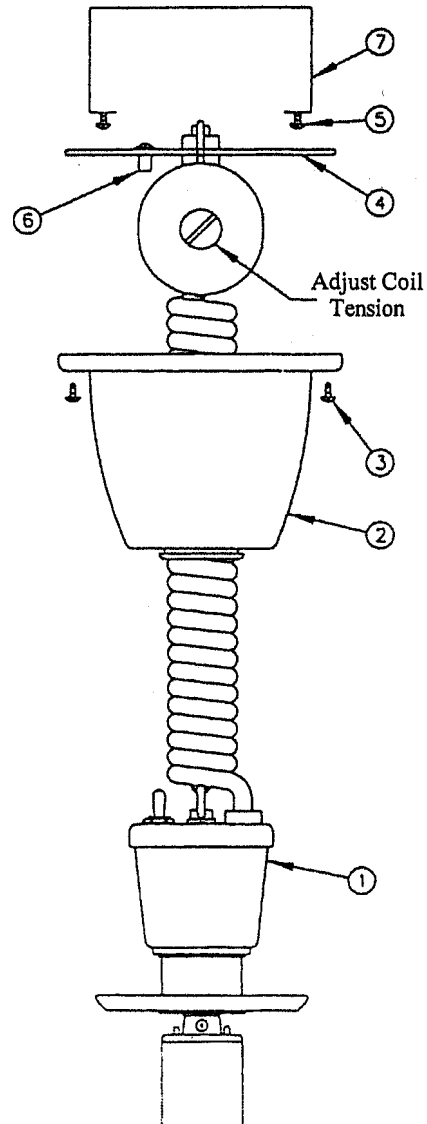

CAUTION

**DO NOT PULL DOWN ON THE CORD
BEYOND THE STOP.**