

## INSTALLATION INSTRUCTIONS

for Latch Conversion Kit 1006-108-K1

To Convert from 1006-059 Push Button Latch to 1006-104 Magnetic Latch

### PARTS INCLUDED IN KIT:

QTY	PART
1	Latch & Strike
1	Strike Bracket
4	Screws - C'sk #10-32 x 1-3/4" Long
5	Screws - Truss Hd. #10-24 x 1/2" Long
5	Lockwashers #10
1	Drive Rivet
2	Acorn Nuts
1	Adjustment Plate
1	Latch Shim

### Removing Existing Latch and Strike: (Figure 1)

1. Remove plastic plugs with a sharp tool and unscrew latch from door.
2. Remove screws from the strike bracket assembly. Drill out drive rivet, if necessary.

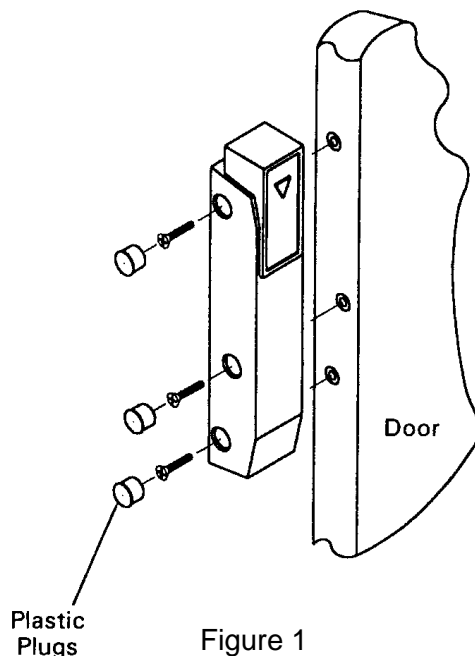


Figure 1  
Removing Old Latch

### Installing Magnetic Latch and Replacement Strike: (Figure 2)

1. Screw the new strike bracket assembly to the cabinet. If necessary, set the drive rivet by hitting head of rivet with hammer after installation.
2. Screw the new latch to door using the holes as shown in Figure 2. Adjust latch back or forth on latch plate to ensure good door closure and gasket seal.

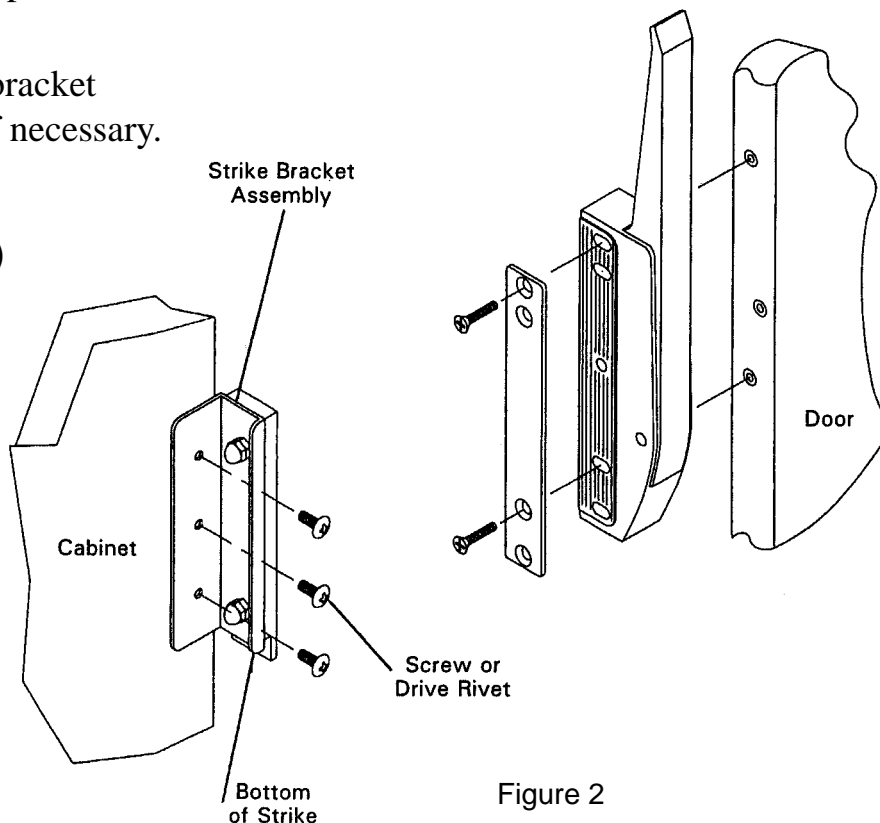


Figure 2