

ROD ATTACHMENT INSTRUCTIONS

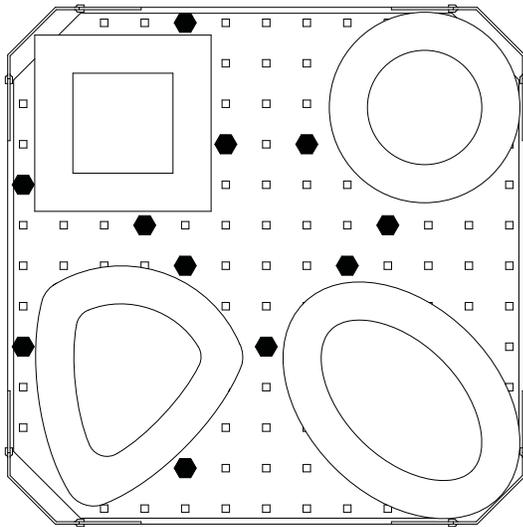


Figure 1

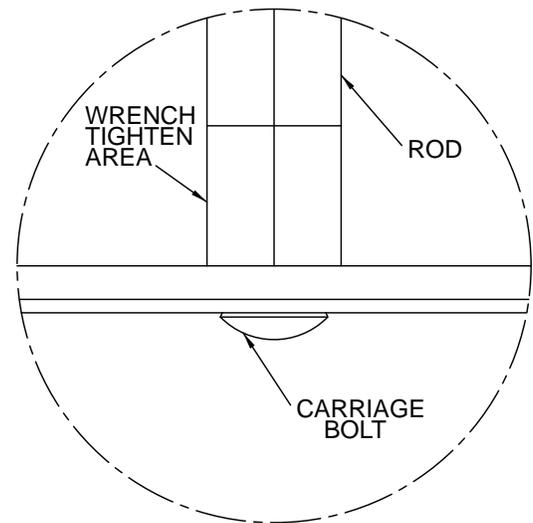


Figure 2

1. Layout dishes to figure pattern for rods to be attached, based on size and shape of dishware. (Fig. 1)
2. Attach rods with carriage bolt by inserting bolt from the bottom of the dish dolly and into the threaded portion of the rod. Make sure that the square neck on the bolt and the square opening in the dolly are aligned, hand tighten making sure that the bolt head is flush with the underside of the dolly. (Fig. 2)
3. Tighten rods with a wrench on the lower end of the rod where there is no color coating. (Fig. 2)



Make sure that the dishes do not touch each other or hang over the edge of the dolly or damage may occur.